

Version No.:2018001

Spec. No.: 004C

规格承认书 Specification for approval

产品名称: 004C 车用保险丝快速取电器

Product Type: Micro 2 Micro II ATA Add A Circuit 32V 15A In-line Car Truck Mini Auto Fuse Holder UL1015 16AWG **Red With Fuse Adapter**

Ao littel Technology Co.Ltd.

Bld. 16, Yanhe East Road, Xiangdong Village, Dongguan 523833,

Guangdong, China

H.P.: 1371362419 Fax #:0769-89390418

QQ #: 3217998702 Email: eric.lye@aolittel.com

http://www.passivemall.com/ http://www.aolittel.com/






















Ao littel Technology Co.,Ltd.

1. Description

The MICRO2 fuse is the new standard for vehicle circuit protection. Its sub-miniature design meets the need for more circuits to be protected while utilizing less space and its ability to cope with high temperatures in adverse environments makes the MICRO2 fuse the recommended choice for protection.

2. Best used for a easy and fast installs

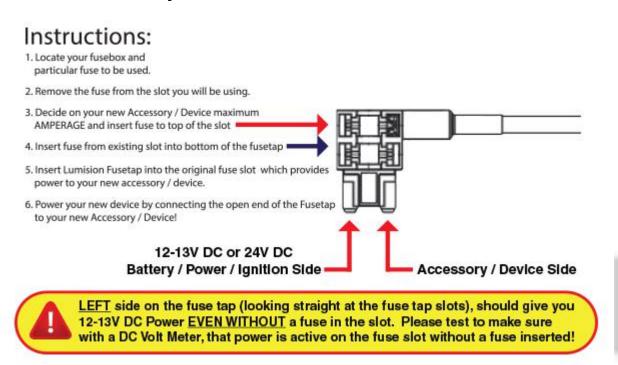

3. Features

- ☑ MICRO2 standard fuse for vehicle circuit protection.
- ☑ Use with MICRO2 fuses up to 20 AMP each slot.
- ☑ Sub-miniature design meets the need for more circuits to be protected.
- ☑ Provide one fuse holder to protect existing circuit, and a second fuse holder to protect new circuit.
- ✓ Utilizing less space and able to cope with high temperatures in adverse environments.

4. USE OUR DUAL FUSE TAP TO POWER TO CAR ACCESSORIES:

Good for wiring power to these items

Car Black box



Ao littel Technology Co.,Ltd.

Car alarms

Remote starters

Car locators (theft recovery systems)

Engine block heaters

DVD players

Satellite radio

GPS

Cell phone charger

5. Specificaitons

Color: Black

Shape: Blade

Voltage: 32V

Fuse current: 20A


Fuse standard: Micro2 / ATA


Package size: 11 * 8cm / 4.3 * 3.1in

Weight: 8g / 0.27oz

6. Dimension (mm)



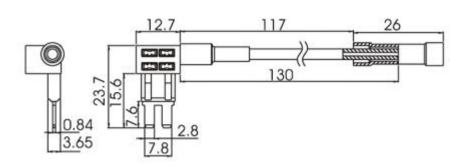

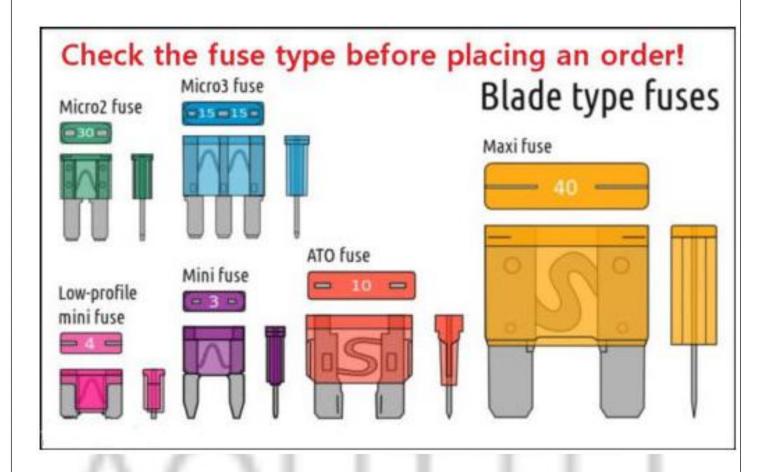

7. Installation Introduction

Installation is easy:

Simply remove an existing fuse from the fuse box, insert that fuse in to the bottom slot of the fuse tap.

Insert a suitable fuse for the new accessory in to the top slot.

Crimp your new live wire to the blue butt terminal on the fuse tap.

Insert the fuse tap into the fuse box slot where the fuse originally was.